Reference

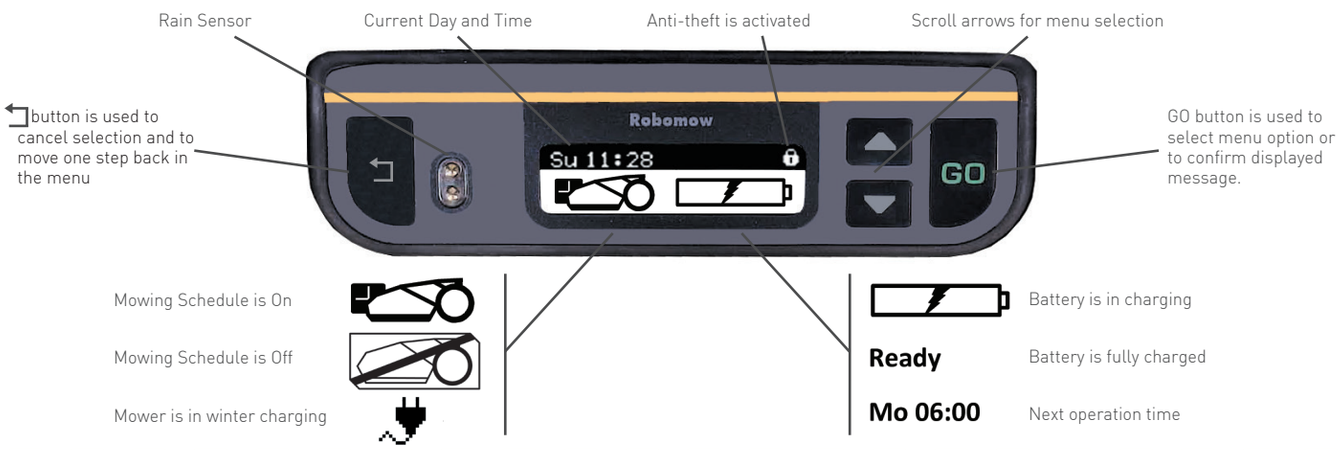

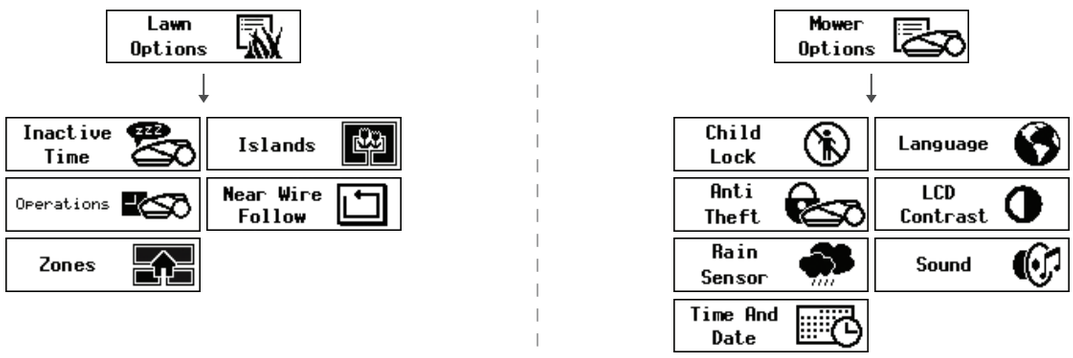

Chap. 3.1

Chap. 2.9

DOC6013E

For all RS models:

AT.	01/ 267 59 45
BE.	070.660.124**
CH.	0900.888.101*
CZ.	800.909.898
DE.	0691 532 00808
DK.	70 25 23 03
FI.	093 157 9150
FR.	03.68780407
IE.	0862 550801
IT.	840.22.22.00
LU.	0900.4300.4090**
NL.	0900.762.6669**
NO.	4000.7719
PL.	+48 58 770 94 45
RU.	+7(495)544.24.14
SE.	0771.895.895
GB.	01522 283007

For all MS models:

AT.	01/ 267 59 45
BE.	070.660.124**
CH.	0900.888.101*
CZ.	800.909.898
DE.	0691 532 00808
DK.	70 25 23 23
FI.	093 157 9150
FR.	03.68780407
IT.	840.22.22.00
LU.	0900.4300.4090**
NL.	0900.762.6669**
NO.	32 82 99 40
PL.	+48.58.770.94.45
SE.	08 5250 8480

* 0-5 Min.= CHF 0.08/Min. ab/à partir de 6 Min.= CHF 1.40/Min. beim schweizerischen Festnetz. Pour le téléphone fixe Suisse Mobilfunkkosten können abweichen/Les coûts téléphoniques mobiles peuvent dévier.

** Max € 0.35 p/m.

Let's talk

robomow.com

Quick start guide

For RS / MS Models

Robomow®
friendly home

Watch the Video

Wire Setup

Carefully read and review all safety instructions, warnings and cautions contained in the Operating & Safety Manual.

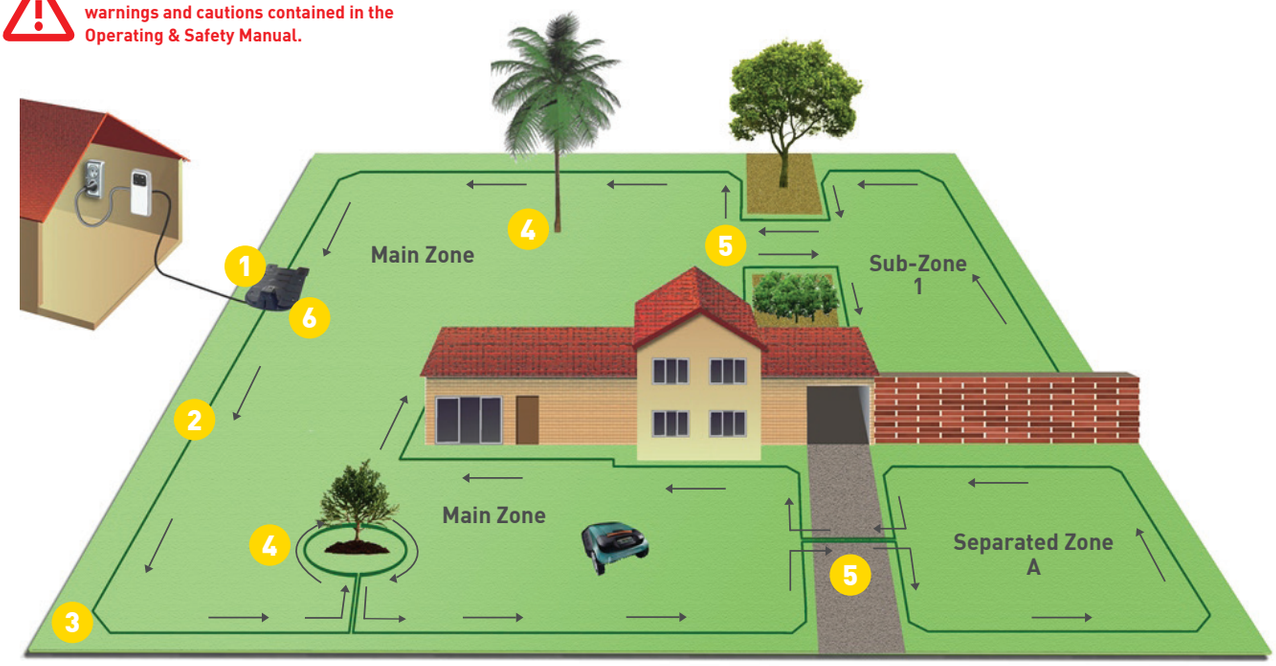

1 Base Station Location
Chap. 1.1.4

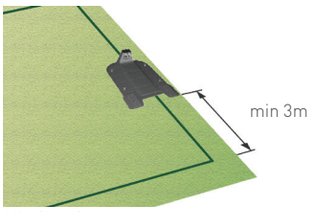

Min 3m after corner

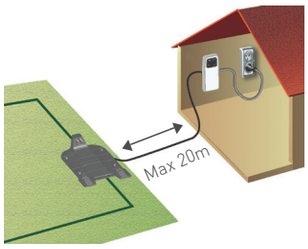

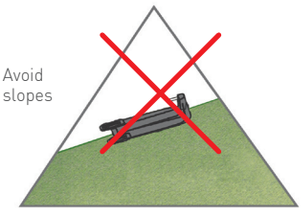

Avoid slopes

2 Wire Direction & Distance
Chap. 2.1.2

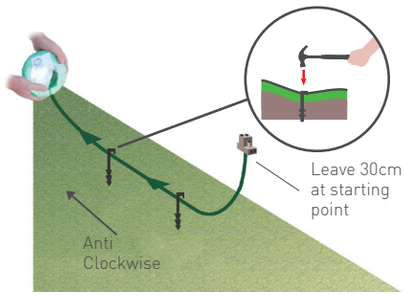

32cm from edge

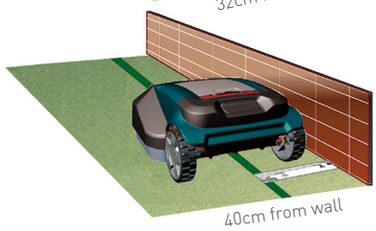

40cm from wall

3 Corners
Chap. 1.6.1, 2.2.1

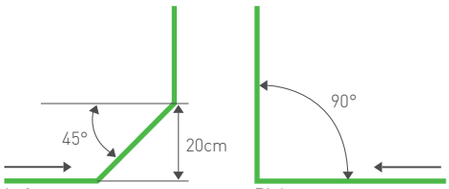

Left turns

Right turns

4 Obstacles Inside Lawn
Chap. 1.6.1, 2.2.1

Both wires under same peg

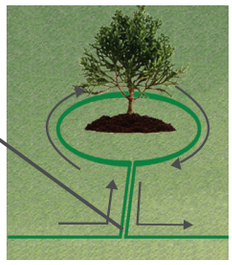

Soft obstacle

Hard obstacle

5 Multiple Zones & Narrow Pass

Chap. 1.3, 2.3

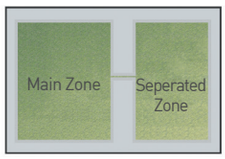

W < 1.2m

Chap. 1.2.2, 2.2.2

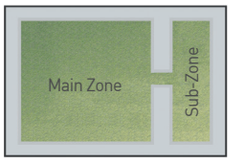

1.2m < W < 2m

Chap. 1.2.2

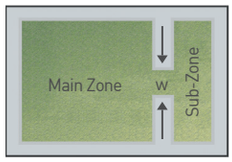

2m < W < 5m

Chap. 1.2.1

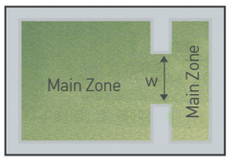

W > 5m

6 Finish

Connect the wire

Base Station Installation

7 **Remove charging adaptor**
Chap. 2.6.3

8 **Connect the wires**
Chap. 2.6.3

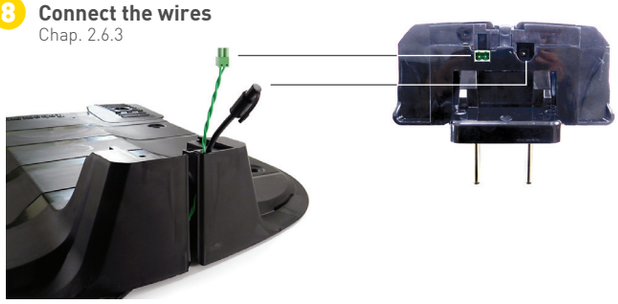

9 **Assemble adaptor**
Chap. 2.6.3

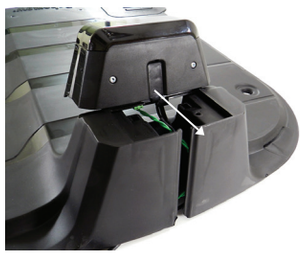

10 **Insert 2 stakes**
Chap. 2.7

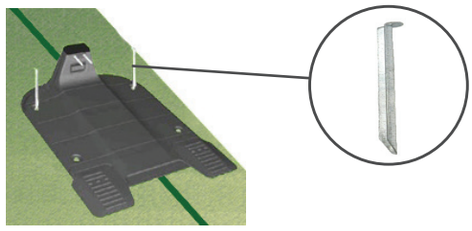

Power Box Installation

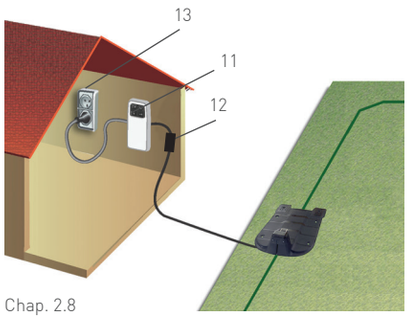

Chap. 2.8

11

Mount Bracket

12

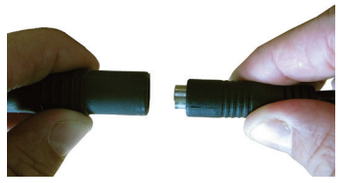

Connect 20m extension cable

13

One-Time Setup

14 **Insert fuse**
Chap. 3.1

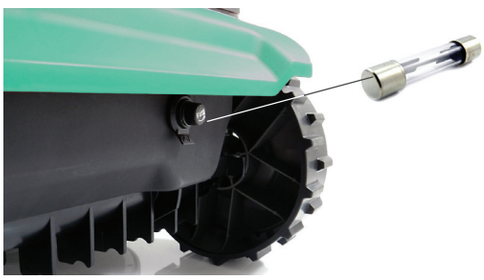

15 **Follow instructions on Robomow LCD**
Chap. 3.3.1- 3.3.3

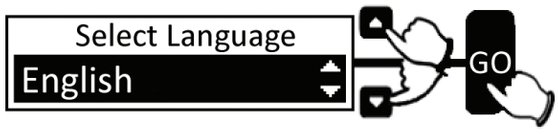

16 **Setup complete**

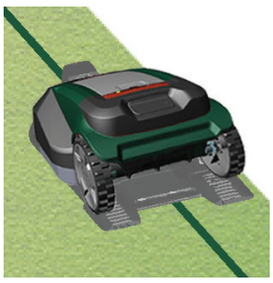
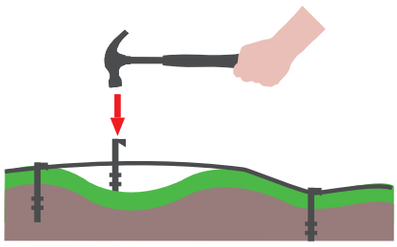
17 **Add pegs**